CHAPTER 4: DESCRIPTION OF LED/ BUTTON

CONTENTS

1. **Description of LED Display** ——— 4-1
2. **Description of Panel Button** ——— 4-2

1. Description of LED Display

These three LEDs indicates the current status of SC5500 and Risograph.

ERROR : This LED indicates error on the Risograph.
READY/DATA : This LED indicates the data receiving condition from the computer.
PAGE STANDBY : This LED indicates that the unit is in stand by mode waiting for the next command.

LED / STATUS	ERROR (Orange)	READY/DAT (Green)	PAGE STANDBY (Yellow)
Right after the Power turned ON	ON	ON	ON
Ready for operation (Waiting for the data)	OFF	ON	OFF
Data processing in progress (Receiving the data)	OFF	Flashing (Fast)	OFF
Data processing in progress (No data receiving)	OFF	Flashing (Slow)	OFF
Page data completed	----	----	ON
No error on the Risograph	OFF	----	----
An error on the Risograph (Jam error, Service Call, etc.)	ON	----	----
An error on the Risograph (No power, Time out error)	Flashing	----	----
Waiting for next operation command	OFF	----	Flashing

---- : Depending on each conditions

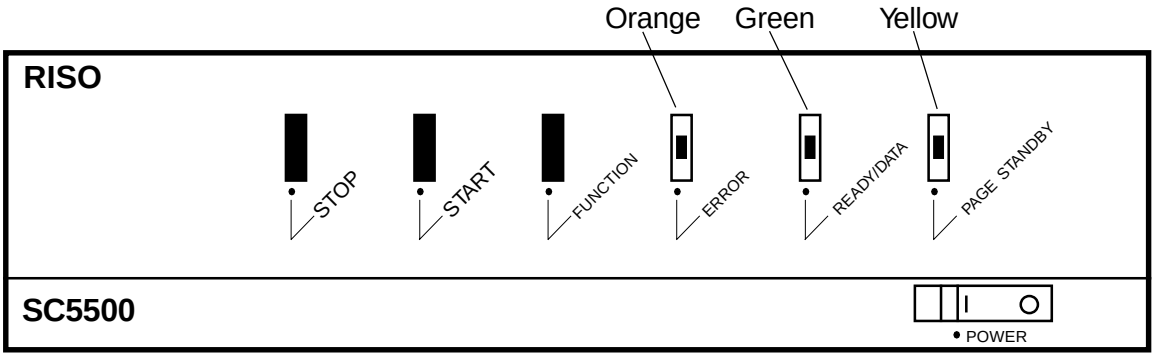

2. Description of Panel Button

Use 3 buttons to operate the SC5500 and Risograph.

STOP BUTTON : Pressed to stop the print job or to start the Master-making of the next page.
START BUTTON : Pressed to start the print job or to continue a suspended job.
FUNCTION BUTTON : Pressed to redo the Master-making of the current page.

BUTTON / STATUS	STOP Button	START Button	FUNCTION Button
Power turned ON with the button pressed		Executes a Test Print	
During the idle condition			
During data processing			
During Master-Making	If the Auto Print is active, the Risograph stops after the completion of the Master-making and goes into stand by mode		
During printing	Stops the printing and goes into stand by mode		
Stand by mode with the Auto Print OFF	Starts Master-making of the next page	Starts the printing job	Re-starts the Master-making of the current page
Stand by mode after the error during the Master-making	Starts Master-making of the next page	Re-starts the Master-making of the current page Re-starts the printing job	
Stand by mode after the error during the printing	Starts Master-making of the next page		